English Version

KeePad User Manual

O!tool KeePad

Welcome

The OZAKI O!tool KeePad is an adjustable and detachable Bluetooth keyboard folio for your iPad Air and iPad Air 2. The SlideAngle Keyboard Folio allows you the ability to shape-shift your iPad into a laptop. From fun to functionality, KeePad turns your recreation companion, into a business partner.

Product Information

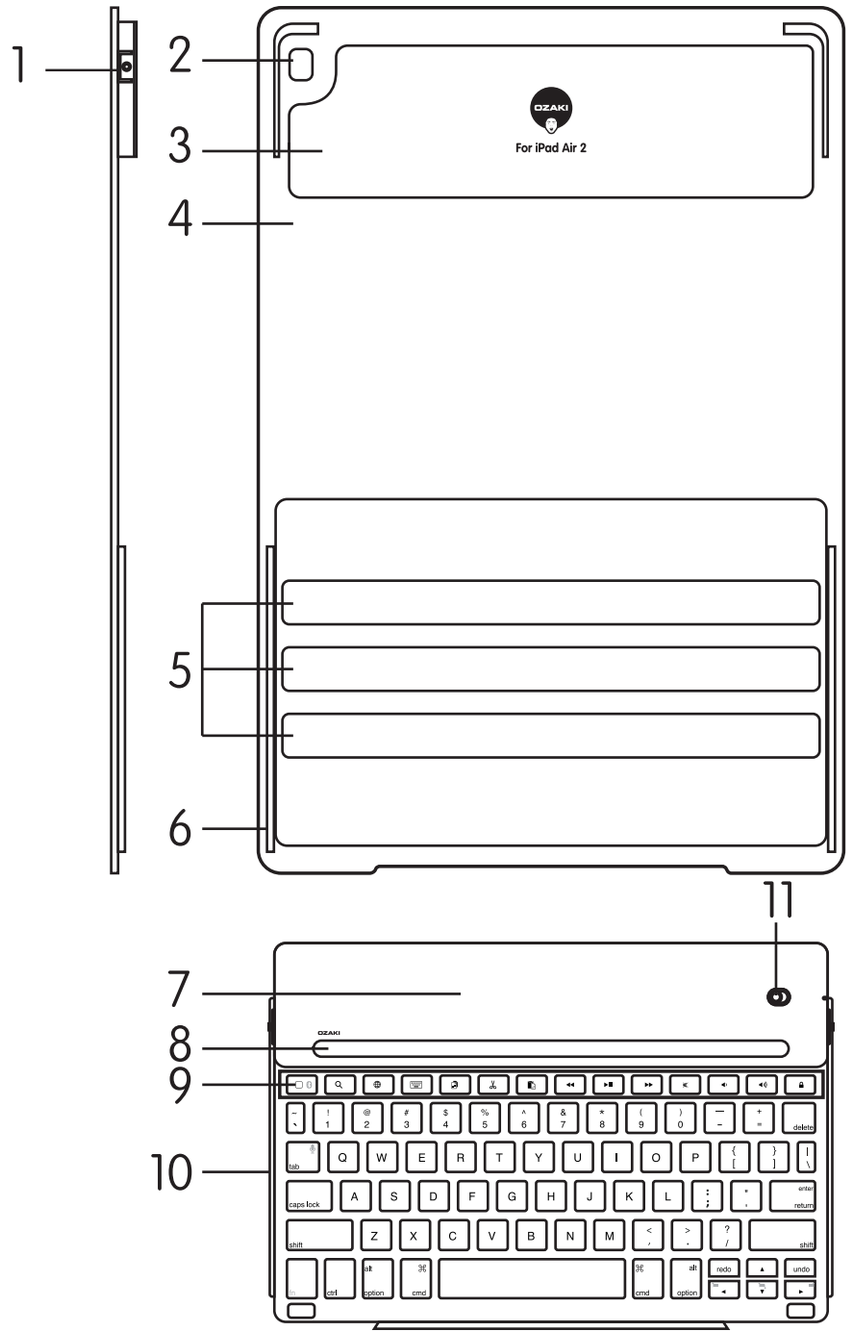

1. Power key
2. iPad holder
3. iPad Air 2 inserter
4. iPad folio case
5. Stand with 3 upright positions
6. Slide rail
7. Detachable Bluetooth® Keyboard
8. Hidden magnets
9. Function keys
10. Inner rail
11. Power On/Off switch
12. Micro-USB charging port
13. Status indicator
14. QIG
15. Micro-USB charging cable

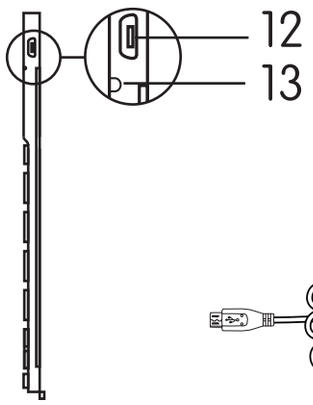



Getting Started
Step 1: Installing your iPad

1. Align your iPad to the edge of the iPad holder and push forward.

iPad Air

iPad Air 2

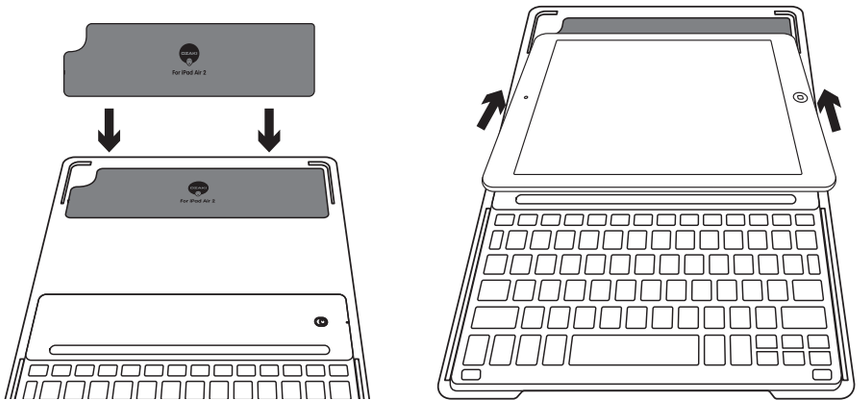

2. Align the edge of iPad with the built-in magnetic keyboard strip to secure it. Your KeePad is now ready for precision typing!

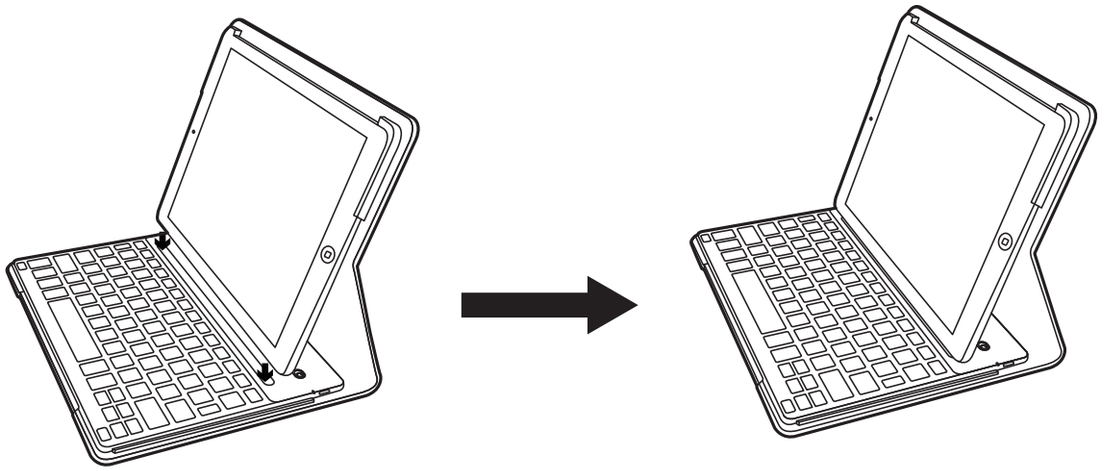

Step 2: Establishing the connection with your iPad

1. **Turn on** the keyboard. You must pair keyboard with your iPad for first time use.

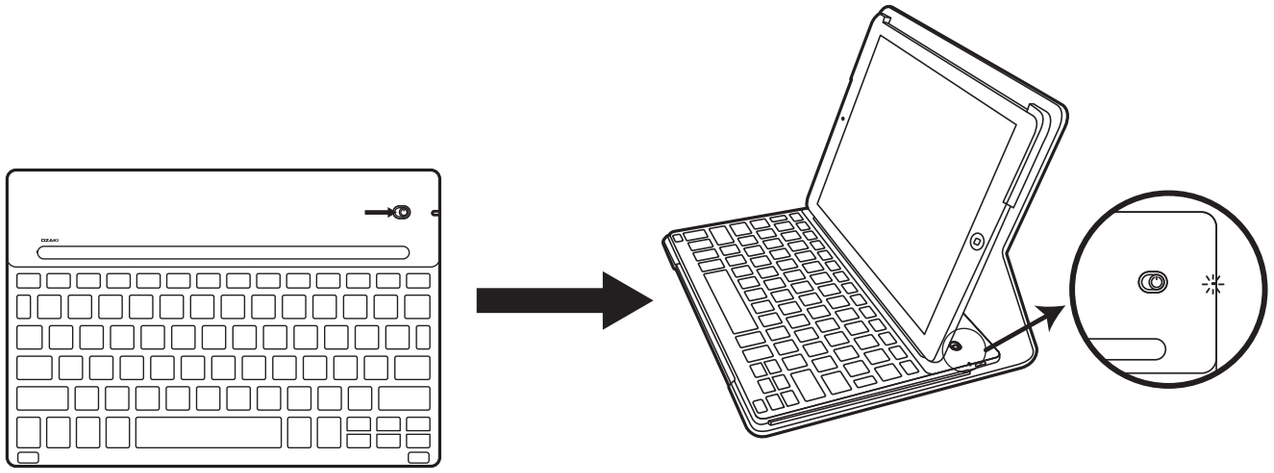

Description	Status indicator
Power on	The indicator stays solid white for 1 seconds.
Power off	The indicator will turn off.

Note:
Standby - When idle for ten minutes the keyboard will automatically switch to standby mode.
Wake up - Press any key to wake the keyboard from standby mode.

2. Press and hold down the **fn** and **Pair** buttons to connect to your iPad. The status indicator will blink to indicate pairing.

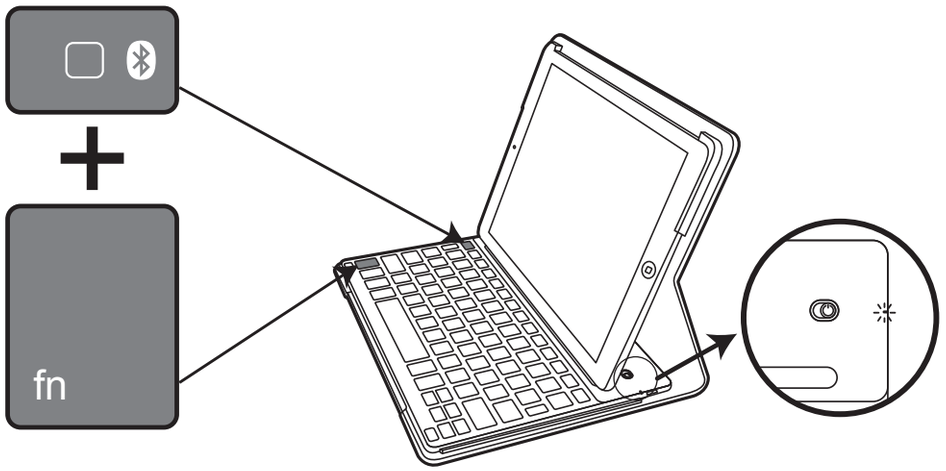

Description	Status indicator
Bluetooth pairing	The indicator will blinking white once per second for two minutes.

3. Navigate to the iPad **Settings** menu and select **Bluetooth**.

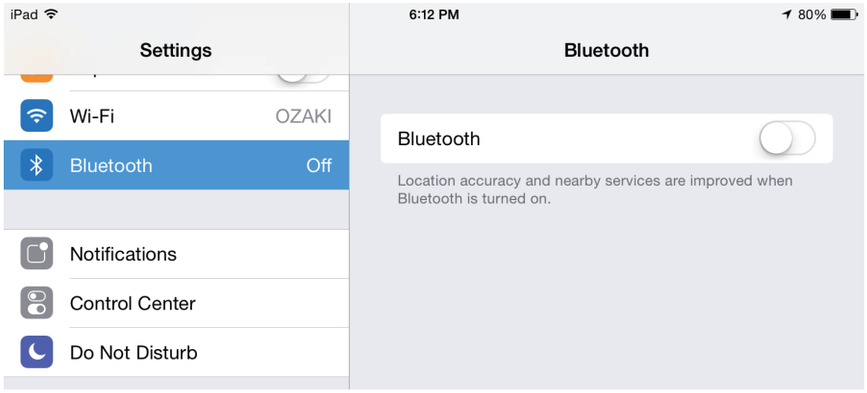

4. Tap the switch to turn **ON** Bluetooth.

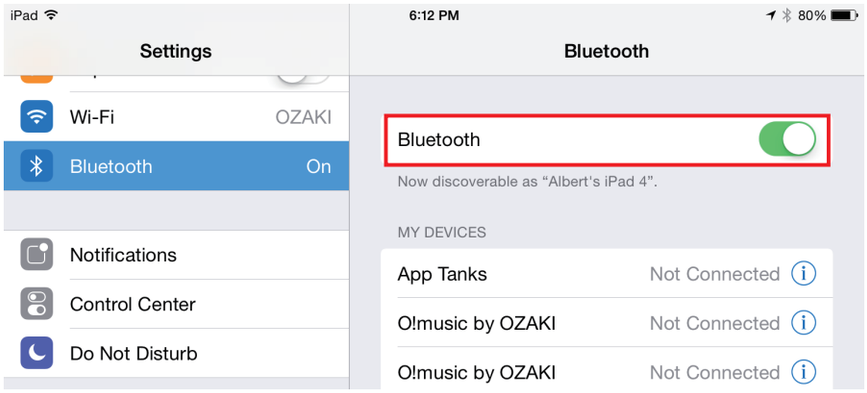

5. The KeePad will show up under **Other Devices** on the tablet.
Select **O!tool KeePad by ozaki** to connect. You will be prompted to enter a PIN code.

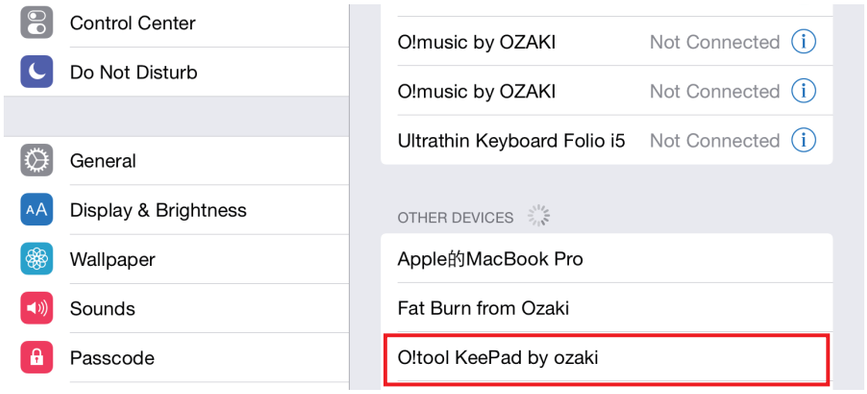

6. Enter the PIN code as shown in the pop-up message, followed by the enter key.

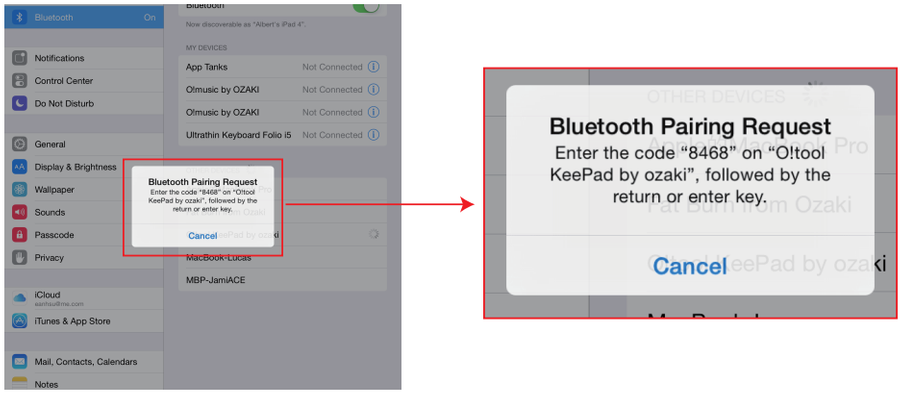

7. The iPad's My Devices menu will show the status as "Connected". The O!tool KeePad is now connected with your iPad.

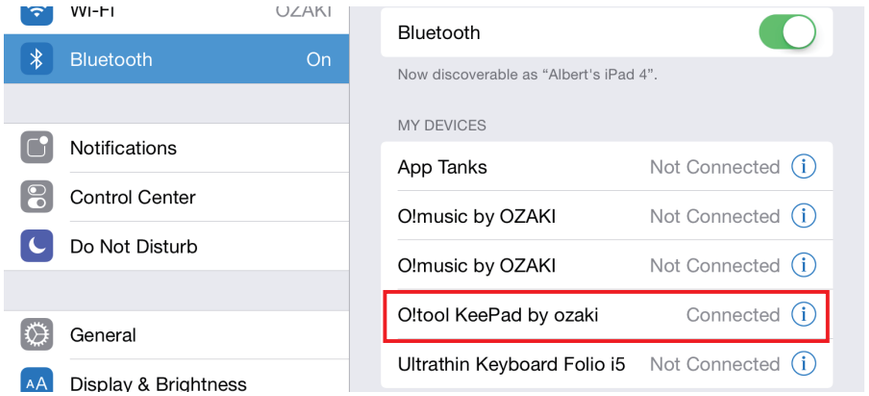

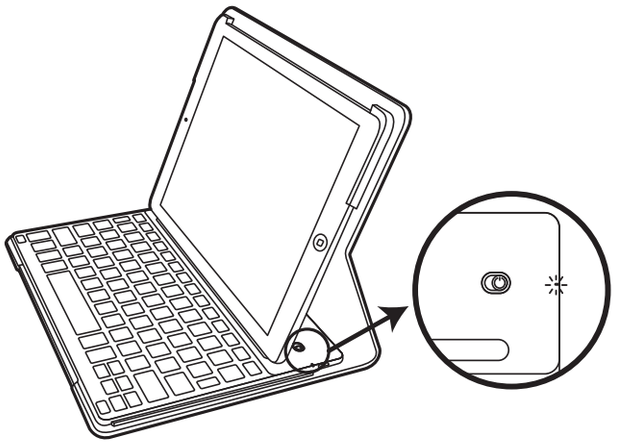

Description	Status indicator
Bluetooth connected	The indicator will flash then turn off.

Connecting with other iPads

1. Turn on the keyboard.
2. Make sure the iPad's Bluetooth is on.
3. Press the **fn** and **Pair** buttons, the indicator will blinking white.
4. Select **O!tool KeePad by ozaki** on your iPad's devices list.
5. Enter the Pin on your keyboard.
6. When Bluetooth is connected, the indicator will flash then turn off.

Detaching your iPad

1. Bend a corner of the iPad holder for detaching your iPad from the iPad folio case.

2. Your iPad is now released.

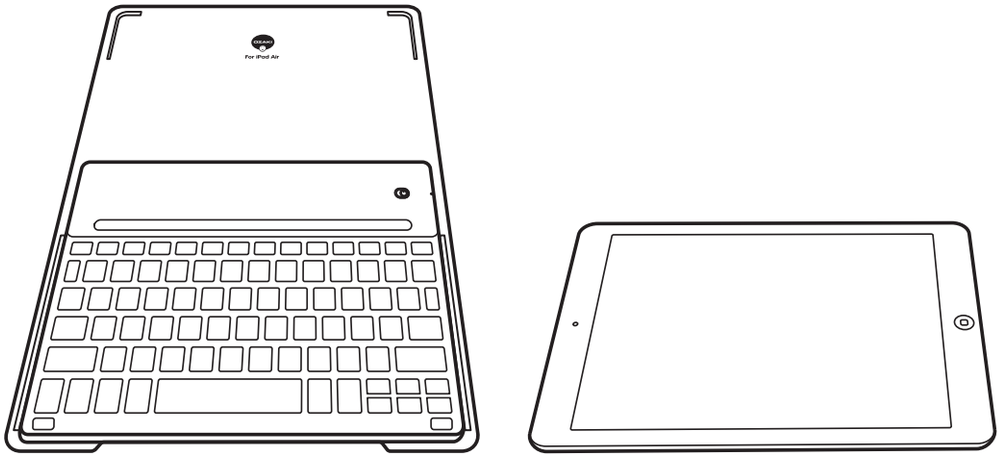

Detaching your Keyboard

1. Detaching your keyboard from the iPad folio case.

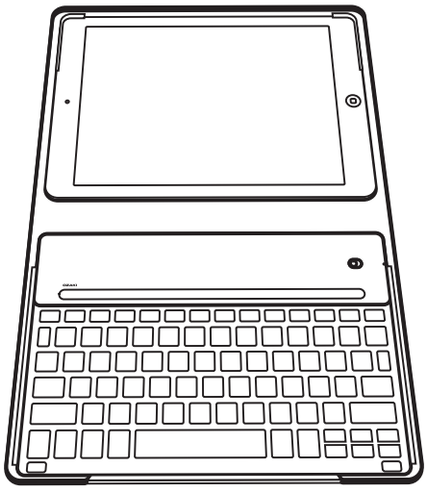

2. Grasp the edge of the keyboard (in the middle) and gently pull the keyboard out.

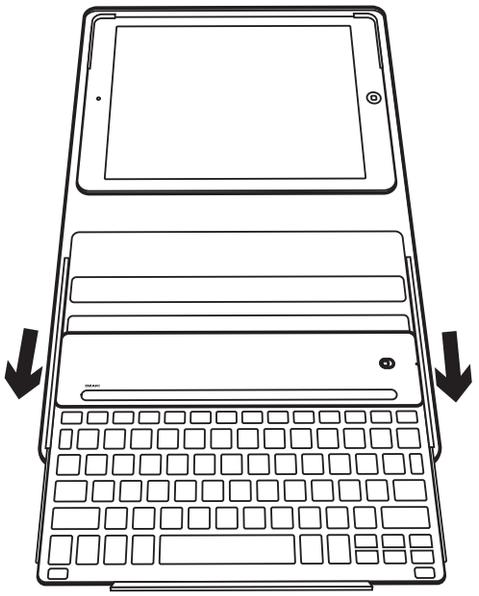

Attaching your Keyboard

1. Align the inner rails of the keyboard to the slide rails of the iPad folio case.

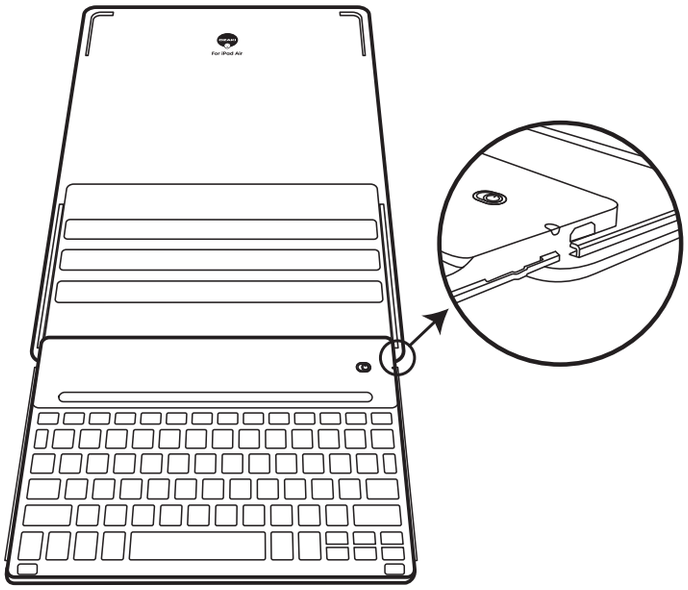

2. Slide the keyboard into the iPad folio case.

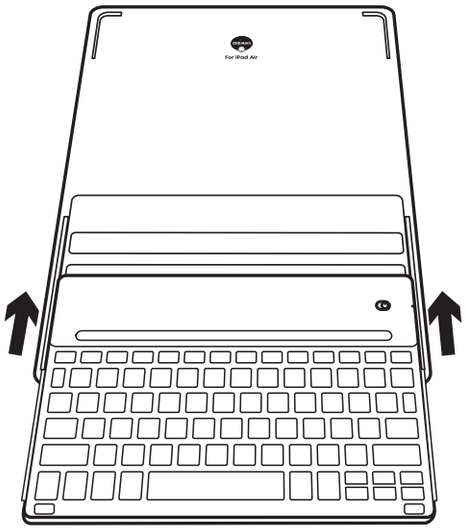

Multi-Slide Viewing Angles

With freely adjustable views and typing angles, KeePad makes any position or situation optimal for an improved user productivity experience.

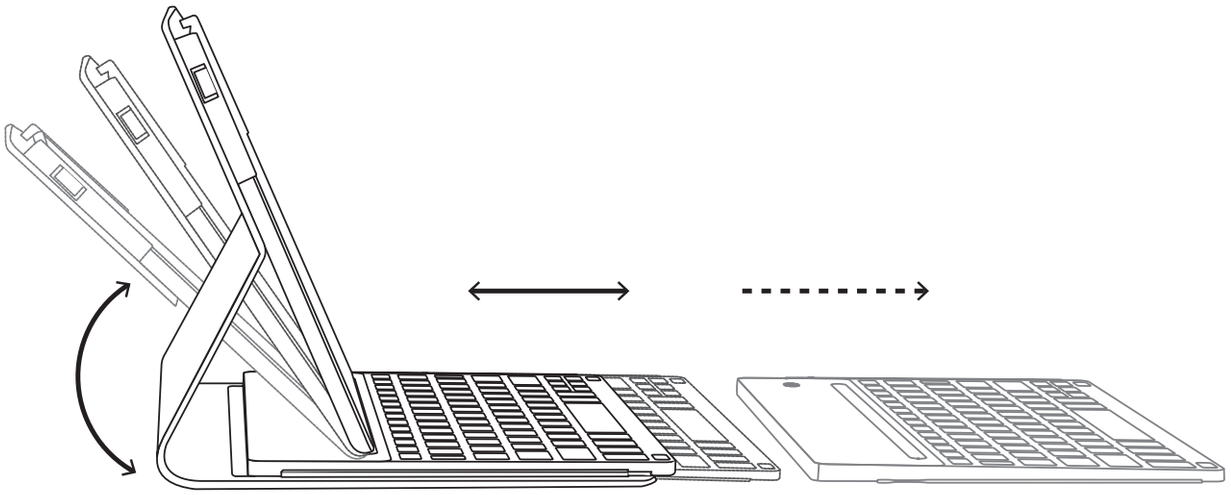

Separate the keyboard from folio for convenient use

With its detachable keyboard design, KeePad users can leave their keyboard in the office or at home, while keeping the iPad safe inside the KeePad protective case.

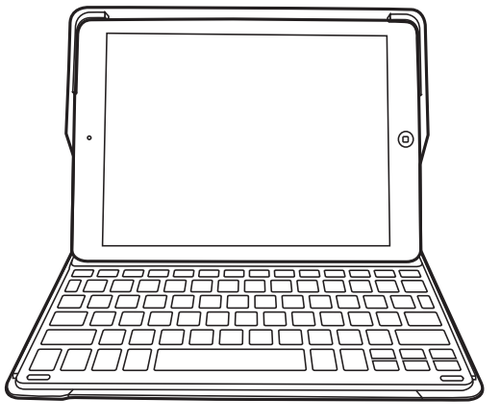

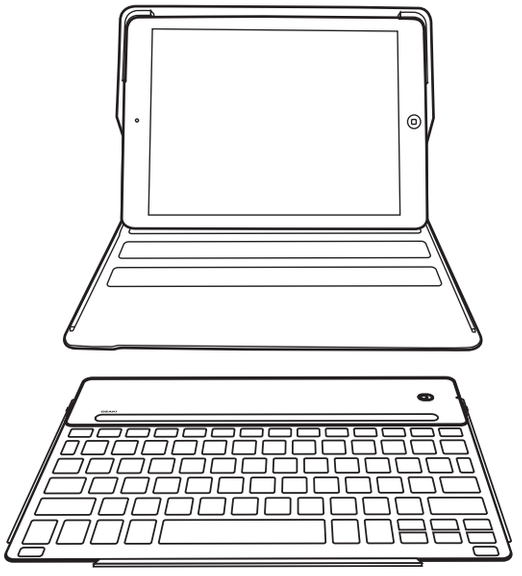

Wake-up & sleep your iPad (With or without the keyboard)

Your iPad will both wake and sleep; even when the keyboard is detached. Our case includes built-in Auto Wake and Sleep features - waking the iPad automatically when you open the case, as well as automatically putting it back to sleep once closed.

With the keyboard

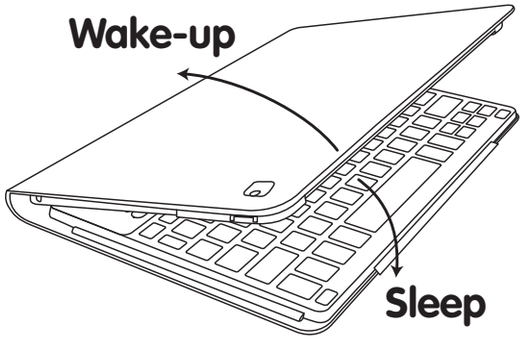

Without the keyboard

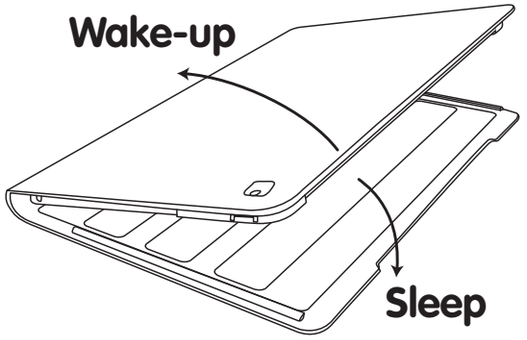

Charging the keyboard

1. Connect the Bluetooth keyboard to a desktop or laptop computer's USB port via the supplied micro-USB cable. Alternatively, you can connect the supplied micro-USB cable to your own USB power source.

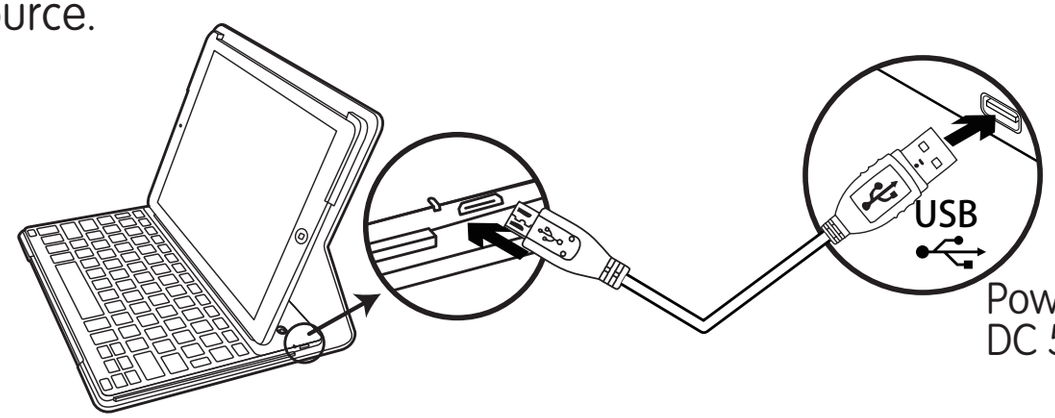

Power source
DC 5V/500mA (Max.)

2. Charging is complete when the status indicator (White LED) turns off. (Charge the KeePad for approximately 4 hours before first use.)

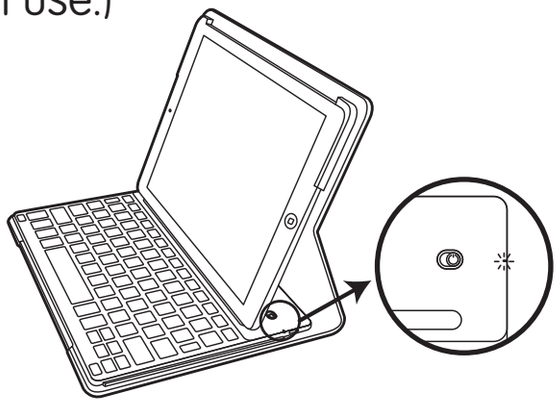

Description	Status indicator
Charging the battery	The indicator stays solid white during charging.
Fully charged (100%)	The indicator will turn off when charging is complete.
Low battery (Below 20%)	The indicator will blink white one time per second.

Battery Information

Battery life * - For approximately 3 months battery life, fully charge the rechargeable battery of the bluetooth keyboard using the included micro USB cable. (*Based on an average use of two hours per day)
Extend battery life - Please switch the KeePad to the **"OFF"** position when not in use.
Battery low - Charge the battery if the status indicator blinks blue once per second.
Wake up - The keePad enters standby automatically if unused for 10 minutes. Press any key to wake it.

Function Keys for KeePad

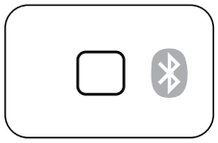

fn + iPad Home screen
= Bluetooth Pairing

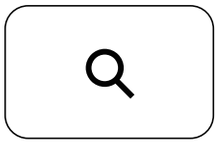

Search

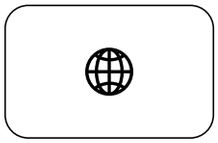

Switch language

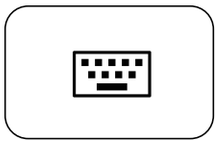

Virtual keyboard

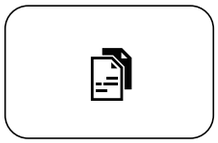

Copy

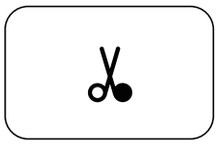

Cut

Paste

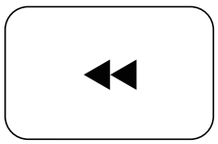

Previous track

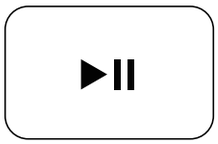

Play/Pause

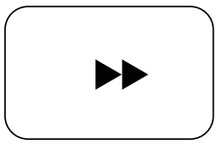

Next track

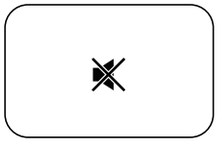

Mute

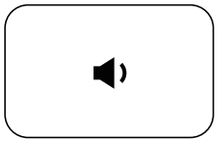

Volume down

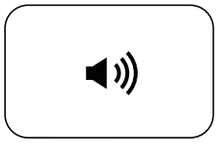

Volume up

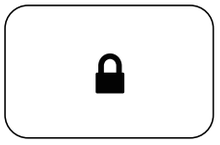

Lock screen

fn + tab = Siri

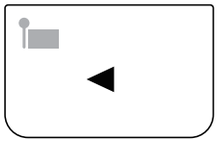

fn + Left cursor = Select left

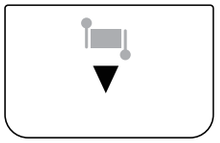

fn + Down cursor = Select all

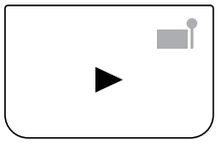

fn + Right cursor = Select right

Warnings

Please read these before use

Do not expose to fire or high temperatures

Do not try to short circuit

Do not expose to water or high humidity

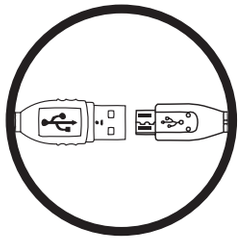

Only use USB cables that are compatible with your device

Cease use if liquid leakage, overheating, or any other unusual

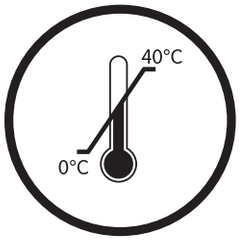

Best suited for temperatures between 0°C~40°C

Do not throw or shake the iPad folio case

Do not crush or puncture the iPad folio case

Use soft cloth to clean the exterior. Do not use harsh chemicals or strong cleaning solvents

Troubleshooting

The keyboard is not responding

- Please press any key to wake the keyboard.
- Turn your keyboard off and back on.
- Recharge the internal baPery.
- Make sure your iPad's Bluetooth is on.
- Forget and re-pair your keyboard with your iPad.

Legal Statement

Users of this product do so exclusively at their own risk. This product is designed for better productivity when working with your tablet device. No product is capable of perfectly working against contingency. Users should exert vigilance before making use of this product in potentially hazardous environments or handling conditions. At no circumstance should Ozaki or its associates, dealers or agents, assume the entire liability, cost of repair, correction or any payment or other remedy for the misuse or abuse of this product. Ozaki reserves the right to revise this statement and to make changes from time to time for the contents hereof without obligation or prior notice for the changes.

Limited ONE (1)YEAR Warrant Information

Warranty Coverage

OZAKI's warranty obligations are limited to the terms set forth below:
OZAKI warrants this OZAKI hardware product against defects in design, workmanship and materials under normal use for a period of ONE (1) YEAR from the date of the original user purchase ("Warranty Period"). Accessories accompanying this product are not covered under warrantee. This Warranty may be subject to OZAKI's change at anytime without prior notice.

Repair and replacement

The maximum liability of this OZAKI product shall not exceed the purchase price paid by the original purchaser. The original purchaser shall without undue delay notify OZAKI of any defect which appears according to OZAKI's Policy, failure to do so shall mean that the purchaser waives their right to have the defect remedied. A valid form of a bill of sale or receipt from an authorized retailer/distributor with date of the original purchase must be presented to obtain warranty service. If a valid claim is received within the Warranty Period, the sole remedy of the original purchaser and OZAKI's sole and exclusive liability shall be limited to, (at OZAKI's sole discretion,) either repair of the defect using new or refurbished replacement parts, or replacement of the product. The repaired or replacement product/part will be warranted for the remainder of the original Warranty Period or thirty (30) days, whichever is longer. When a product or part is exchanged, the replacement product/part becomes the property of the original purchaser and the replaced defect product/part shall become the property of OZAKI.

Exclusions and Limitations

This warranty does not apply: (a) to faulty and improper installation, maintenance, service, repair and/or alteration in any way that is not contemplated in the documentation for the product or canted out with OZAKI's consent in writing, operational adjustments covered in the operating manual for the product or normal maintenance, (b) to cosmetic damages, (c) if the product is modified or tampered with, (d) to damage caused by acts of God, misuse, abuse, negligence, accident, normal wear and tear and deterioration, improper environmental conditions (including, but not limited to, electrical surges, water damage and/or heat/cold/ chemical exposure) or lack of responsible care, (e) if the product has had the model or serial number altered, defaced or removed, (f) to consumables (such as batteries), (g) to products that have been purchased 'as is' and OZAKI, the seller or the liquidator expressly disclaim their warranty obligation pertaining to the product, (h) to any OZAKI or non-OZAKI product, or any APPs or firmware level software (irrespective of packaged or sold with OZAKI product) products purchased from a distributor/reseller not authorized by OZAKi, (i) to damage that occurs in shipment or (j) to damages by any other causes not related to defective design, workmanship and/or materials.

Warranty Service

The Limited Warranty is applicable in all countries and may be enforced by contacting OZAKI support worldwide. For questions and supports, please visit: ozakiverse.com/support